




SMART DOOR LOCK

USER MANUAL

MODEL - DFLv2

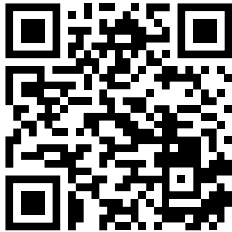


Scan the QR Code to register your product
for hassle-free warranty services.


IMPORTANT NOTE :

We recommend to keep at least 1 mechanical key outside your home. So, in case of emergency, you will be able to unlock the smart lock. This is helpful when battery is completely drained out or any kind of electronic failure.

Product Dimensions

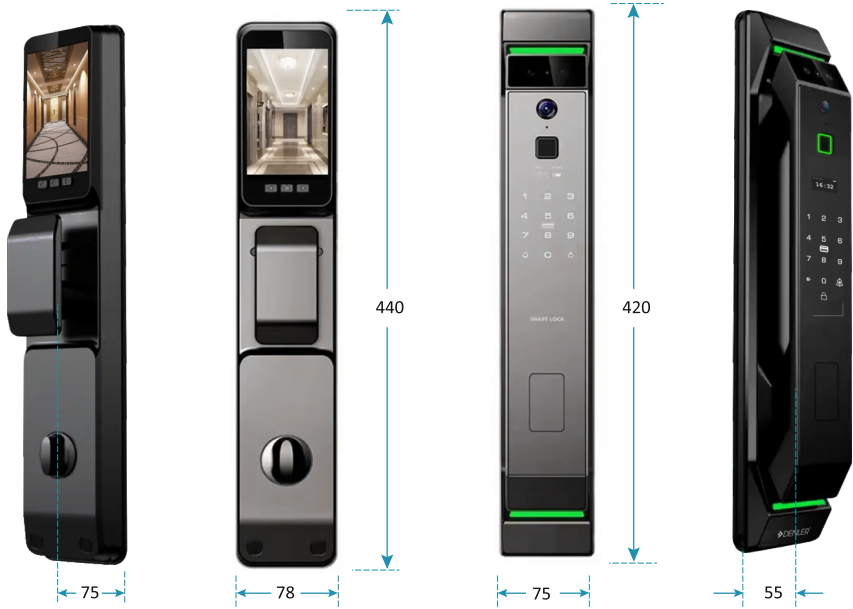


Lock Elements

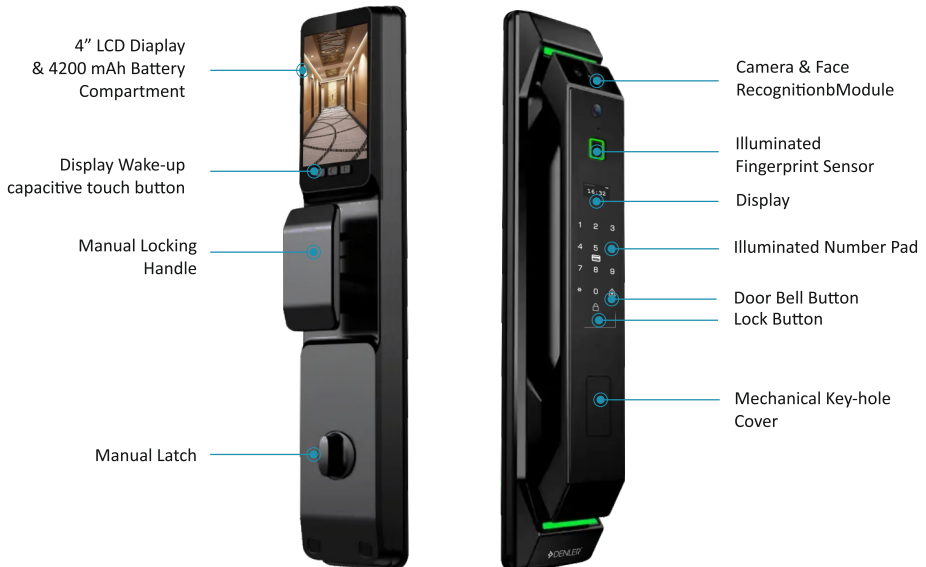


Product Specifications

Parameter	Description
Model Name/No.	Denler DFLv2
Material	Aluminium Alloy
Lock Weight	4.5 Kg
Unlocking Features	Mobile App, Fingerprint, PIN, RFID Card, Mechanical Key
Color	Matter Black
Wi-Fi Network	2.4Ghz (5Ghz not supported)
Suitable Doors	Wooden / Metal
Power Supply	DC 7.4V 4200 mAh Li-ion rechargeable batteries
Required Door Thickness	35-100mm
Data Capacity	20 Faces, 50 Fingerprints, 50 PIN, 50 RFID Cards
Working Temperature	-10°C to 55°C
Working Humidity	0-95%

Keypad Functions

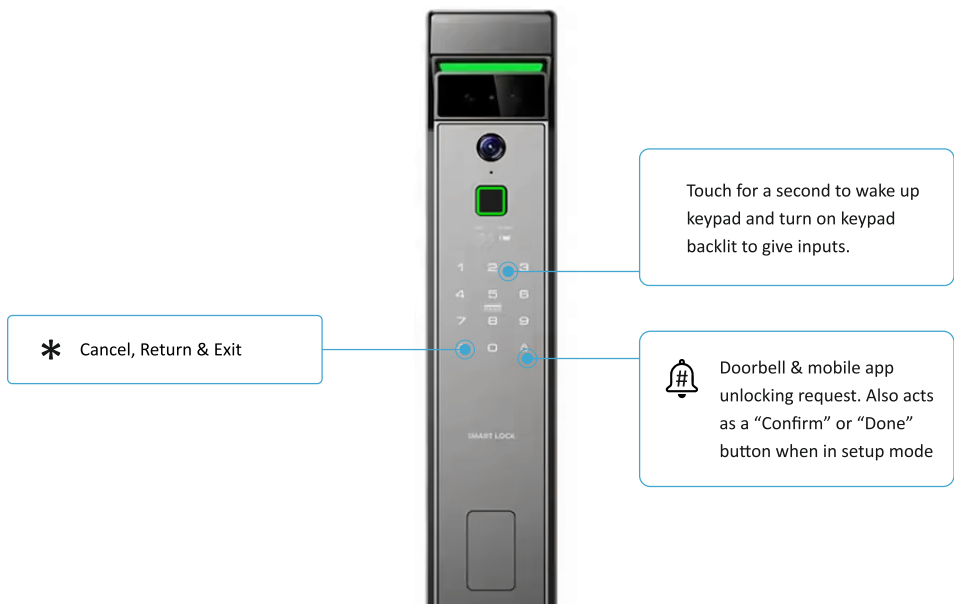


Adding Admin User




Welcome

If you are setting up new lock, you have to add admin user first to start adding users and setup other lock functions. Touch the key for 1 seconds to wake up keypad. You will see “Welcome” screen. Press *# to enter system menu.

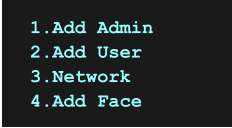

1.Add Admin
2.Add User
3.Network
4.Add Face


Now select option “**1.Add Admin**” by touching number “**1**” on keypad. Where you can add Fingerprint & RFID Card & PIN as admin details.

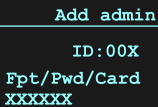

Add admin
ID: 00X
Fpt/Pwd/Card
XXXXXX

Now you can setup fingerprint/RFID card/password as admin user details. Now enter 6 digit numeric password then press “#” to confirm on the next screen re-enter the password and press “#” to confirm.

OR

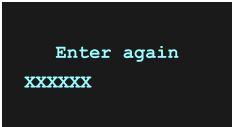

Enter again
XXXXXX


You can add continuing admin user by touching RFID card by touching RFID card on the card icon located on keypad.

OR




Add OK!
ID: 0XX

Touch the fingerprint on fingerprint sensor to add fingerprint (Do not swipe the finger) touch various areas of fingerprint as guided by voice prompt. Press * key to go back to main menu to add face ID

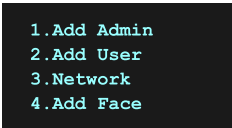

1.Add Admin
2.Add User
3.Network
4.Add Face

Now select option “**4.Add Face**” by touching number “**4**” on keypad. Where you can add face as an admin user.

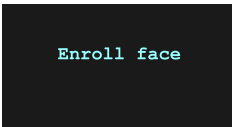


Enroll face

To add face stand in front of lock and adjust your face position as guided by voice prompt. Slightly move face to right, left, up and down when guided by voice prompt.


Note : After setting up the admin user you can now start adding other user biometric data to lock. To enter system menu press *# admin password/fingerprint/face/rfid card #

Adding User



Welcome


After setting up the admin details you can now start adding other users. Touch the key for 1 seconds to wake up keypad. You will see “Welcome” screen. Press *# to enter system menu.

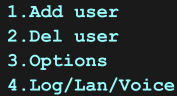

1.Add user
2.Del user
3.Options
4.Log/Lan/Voice


Now select option “**1.Add User**” by touching number “**1**” on keypad. Where you can add Face, Fingerprint & RFID Card & PIN for user by following same steps while adding admin details.

Deleting User

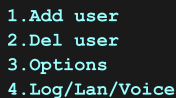

1.Add user
2.Del user
3.Options
4.Log/Lan/Voice

Select option “**2.Del User**” by touching number “**2**” on keypad. Where you can delete Face, Fingerprint & RFID Card & PIN for user by entering the user ID.

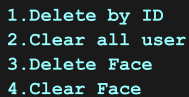

1.Delete by ID
2.Clear all user
3.Delete Face
4.Clear Face

Select option **1.Delete by ID** to delete individual user by entering user ID. You can identify user ID by unlocking the lock with biometric of the respective user any lock will prompt the user ID. **2.Clear all user** will delete all users except Admin, **3.Delete Face** will delete face of the user by entering his ID, **4.Clear Face** will delete all the user faces.

NOTE : In case of temporary user like Maid, remember the User ID while adding fingerprint or PIN. So, you can delete this user even when user is not present at the time of deletion. You can directly delete user with the help of user ID. Else, you have to delete all the user and add again.

Door Direction Setup

IMPORTANT NOTE : Door direction setup is not required if your door lock function is working properly i.e. when you press lock button on the keypad, lock bolts are coming out from lockbody/mortise and when you unlock, they are going back inside the lockbody.

```
1.Add user
2.Del user
3.Options
4.Log/Lan/Voice
```

```
1.Datetime
2.Function set
3.Install set
4.Factory Reset
```

```
1.Lock Dir [R]
2.Force [M]
3.Invert [250]
4.Tamper [OFF]
```

Select “**3.Options**” in system menu. Then select “**3.Install set**”. Now press number “**1**” to change the Lock Direction. If your door is left opening from outside then set “**L**” and If your door is right opening from outside then set “**R**”. After setup check the lock function is working properly or change the door direction.

Factory Reset

IMPORTANT NOTE : Factory reset will delete all the user data including fingerprints, face, RFID cards, PINS. Your lock will get disconnected from you Wi-Fi network and mobile app as well. You have to reconfigure all the settings after factory reset.

```
1.Add user
2.Del user
3.Options
4.Log/Lan/Voice
```

Touch the keypad to wake up lock and touch *# to enter system menu. Enter admin password. Select “**3.Options**” in system menu.

```
1.Datetime
2.Function set
3.Install set
4.Factory Reset
```

Now select number “**4**” on keypad for factory restore settings. System will prompt for confirmation of factory reset.

```
Factory Reset
```

```
No or Yes?
```

Press * to cancel & # to confirm the factory reset.

Now wait until the system prompts “**Success**” message. Now your lock will be in factory setting mode or demo mode.

IMPORTANT NOTE : Distance between Smart Lock and Wi-Fi router should be less than 15 feet. Make sure your Smartphone is connected with 2.4Ghz Wi-Fi network only (Does not support 5Ghz Wi-Fi Network). Location/GPS and Bluetooth is turned ON.



Downloading & Installing App

Scan the QR code to download and install mobile app or you can search for “JLink” mobile app available in Google Play Store or App Store


Register/Sign Up

1. Click “Register” and read the privacy policy and click “Agree” and enter the registration page.
2. Enter valid email id to receive verification code. The country /region of the app will be same as the phone’s. You can change it by yourself when registering (Cannot be changed after registration is completed).
3. Enter the verification code received on email id and proceed to password setting page. Set your password as required and click “Done” (Remember your email and password used for mobile app)


Log In

1. After successful registration now you can login to your JLink account by entering registered email ID and password.
2. You can also login to JLink app with use of your existing Facebook account by pressing Facebook icon at the bottom.


STEP - 1 Press ***#** then **admin password & #** to enter into system menu. Select **1.Add User** then select **3.Network** then **1.EZ Mode**.

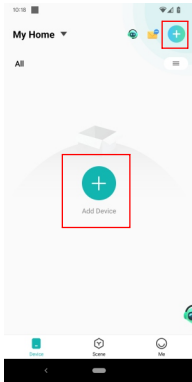


STEP - 1
Click "Add Device"
or "+" icon

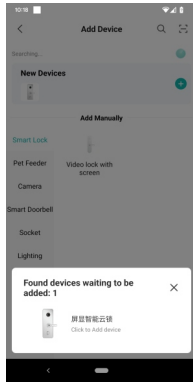


STEP - 2
App will automatically
detect the lock in the
network

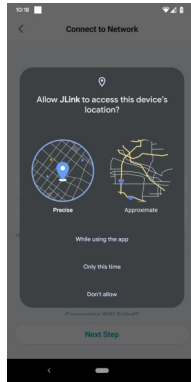

STEP - 3
Give all the permission
for JLink apps when
asked.

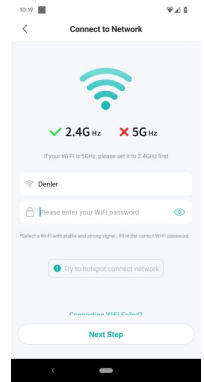


STEP - 4
Enter 2.4Ghz Wi-Fi
network Password

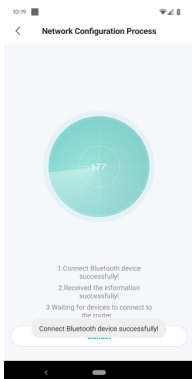


STEP - 5
App will start
connecting with Lock
in the network



STEP - 6
After successful
pairing you can rename
the lock then press
"Next Step" button

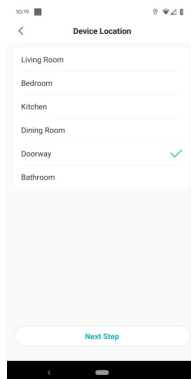

STEP - 7
Now you can select
the location on the lock
in your house.


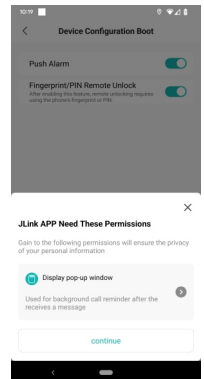



STEP - 8
Give JLink app
permissions to show
pop-up messages.


Remote App unlocking & Video intercom

NOTE :

1. Make sure all app permissions are given to smart life app else it will not notify any update in the notification bar or generate any sound notification.

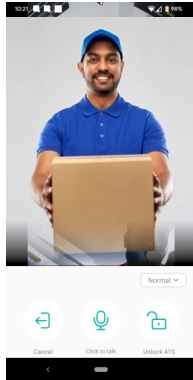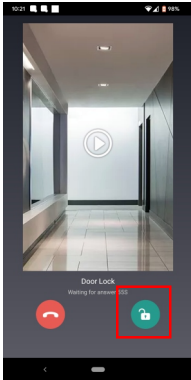

1. When a visitor touches  icon on smart lock, you will notified on mobile app.
2. By clicking Play button you can start video intercom or you can directly slide the slider to unlock.
3. You can also unlock the door during this video intercom as well.

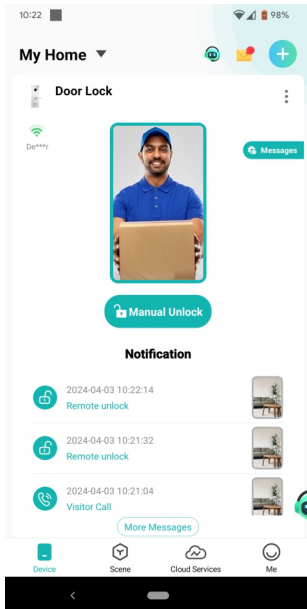

DFLv2 also support direct access to video intercom & unlocking. Simply press the Manual Unlock button to unlock the door.

To start video intercom directly, simply press play button on the picture to start live audio-video intercom.



www.denler.in